


EPCU10012 and EPCU10013 - Exchanging a CPU


Notice: The exchange of a CPU does not require specific knowledge. All connectors are pluggable. It is only important to activate the back-up battery on the CPU.

1 Position of the back-up battery on the CPU

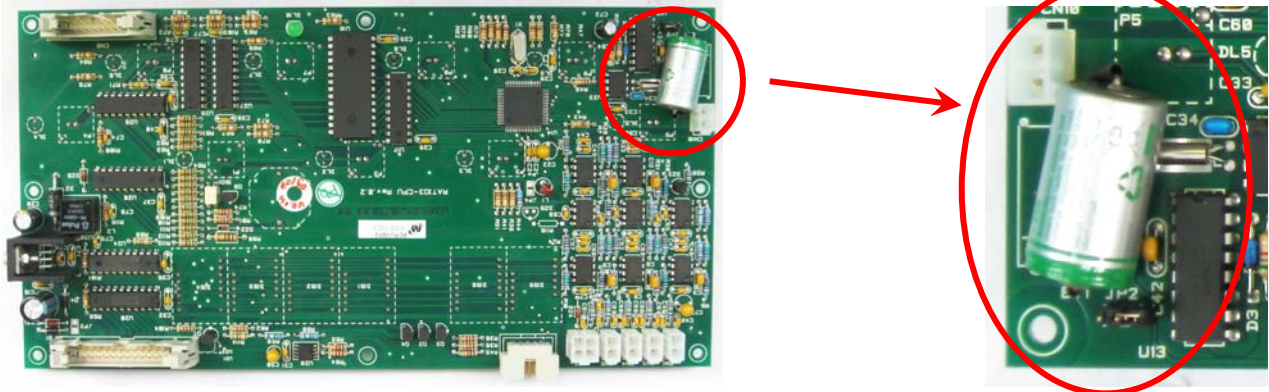

2 Jumper J2 for activation of back-up battery

The jumper J2 is located directly next to the back-up battery. Upon delivery it is plugged in only halfway (see marker in picture below).

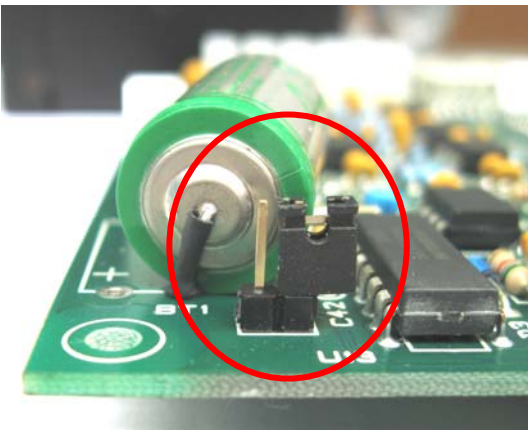

To activate the back-up battery the jumper must be plugged in on both sides.

The CPU is now ready for operation. After installation in the particular device the system parameters as well as the customer's program must be entered (separate documentation available).

