




BLANCO Professional Sneeze guard - installation instructions

Autor: Miroslav Bittner


The image shows a close-up of a white surface, likely a sneeze guard, with the 'BLANCO PROFESSIONAL' logo. The word 'BLANCO' is written in a large, bold, blue sans-serif font. Below it, the word 'PROFESSIONAL' is written in a smaller, grey, all-caps sans-serif font. The surface is slightly angled, and the background is a solid blue color.

BLANCO
PROFESSIONAL


Sneeze guard - installation instructions

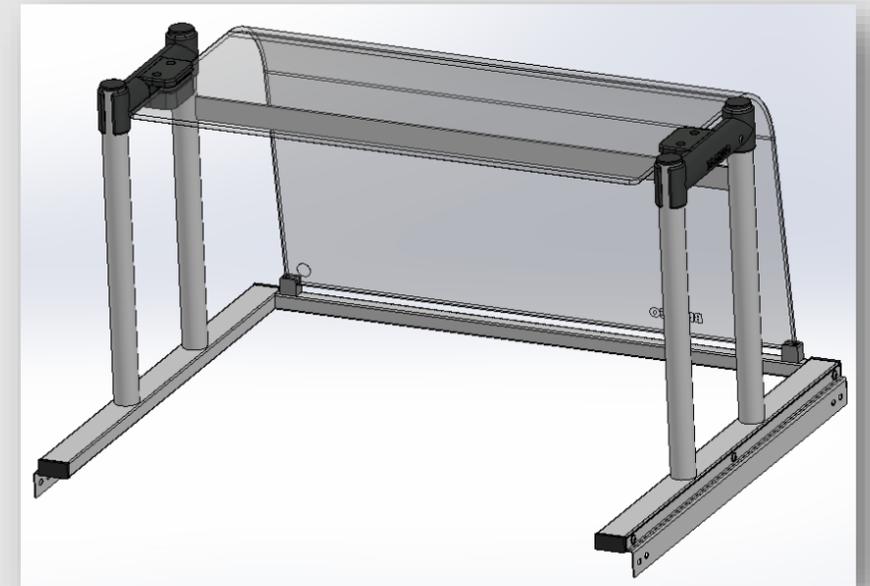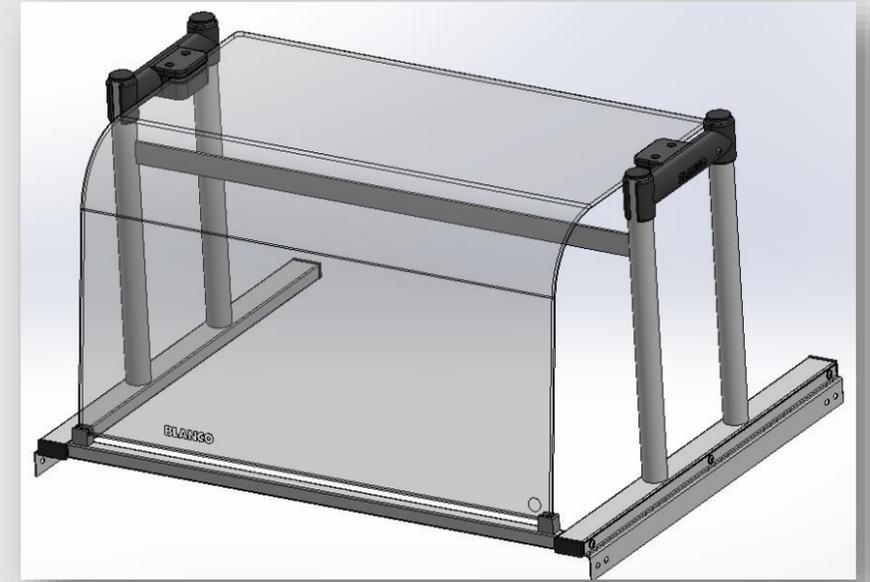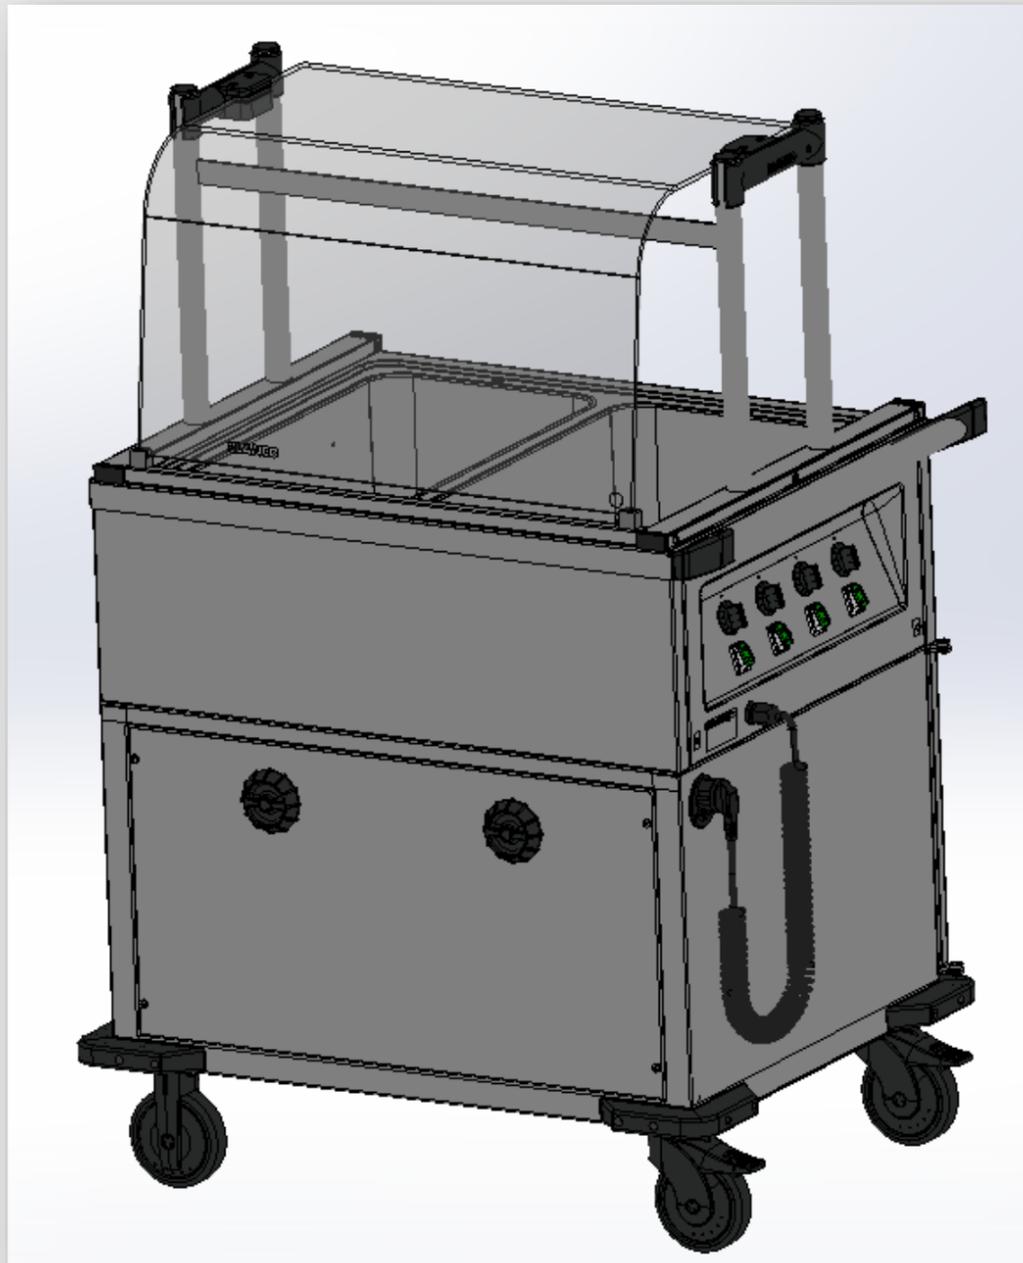


Sneeze guard - installation instructions

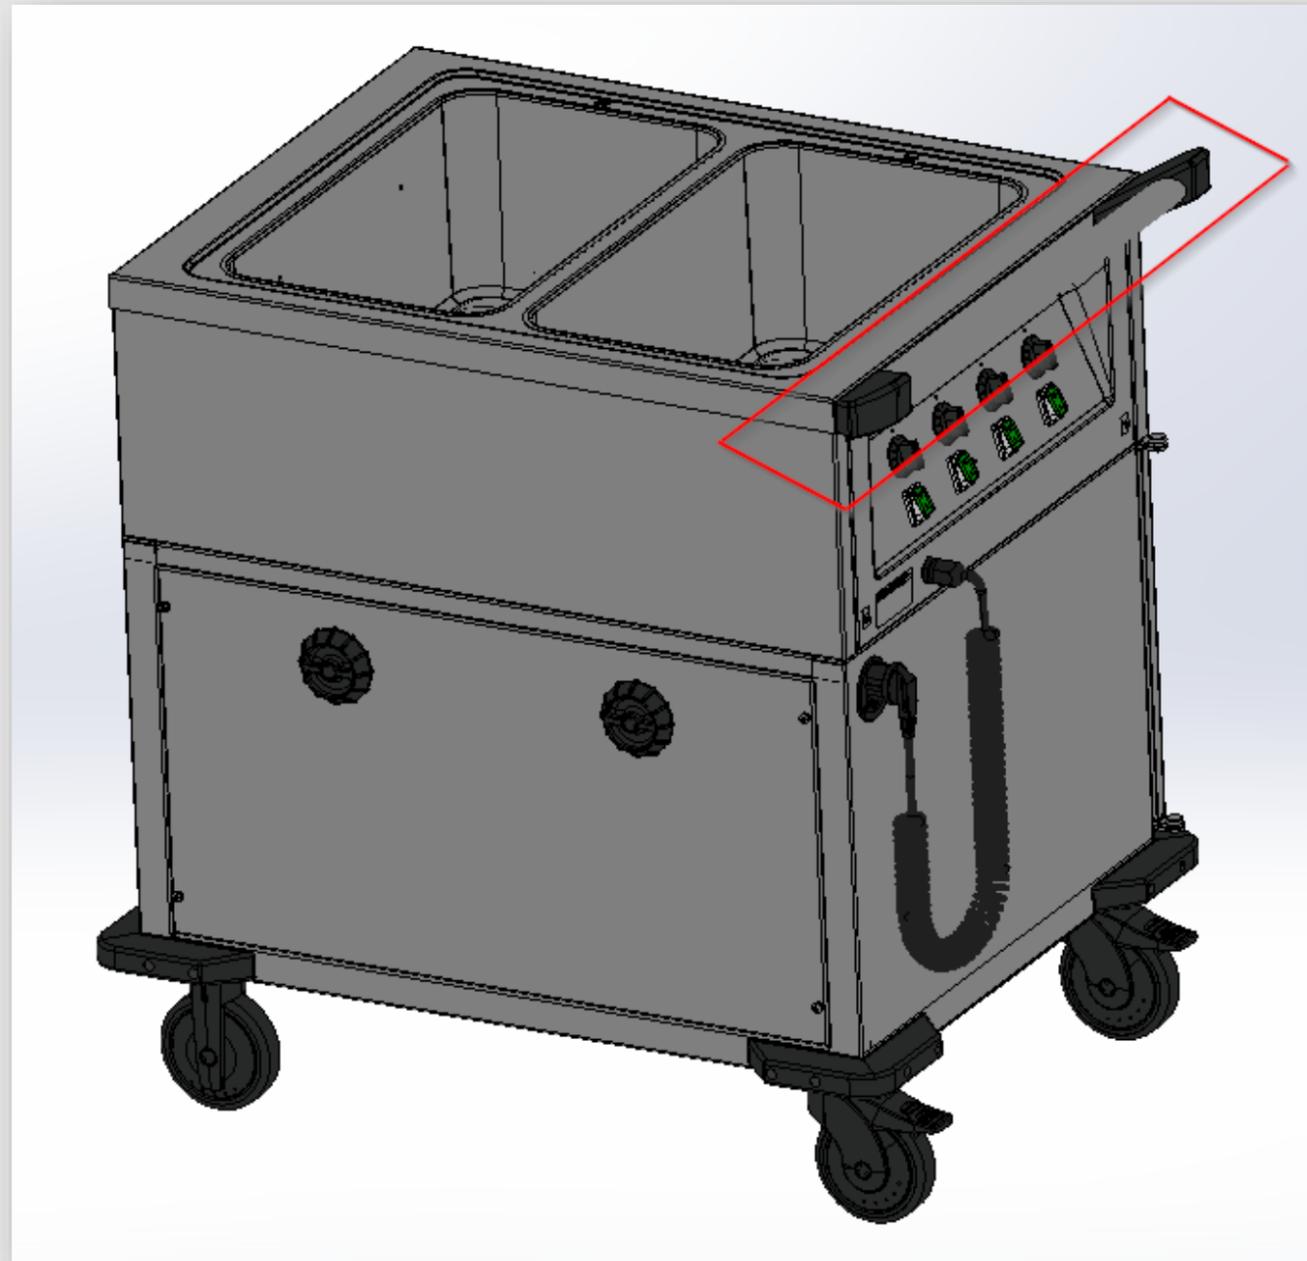


1. Unscrew bolts of the handle.

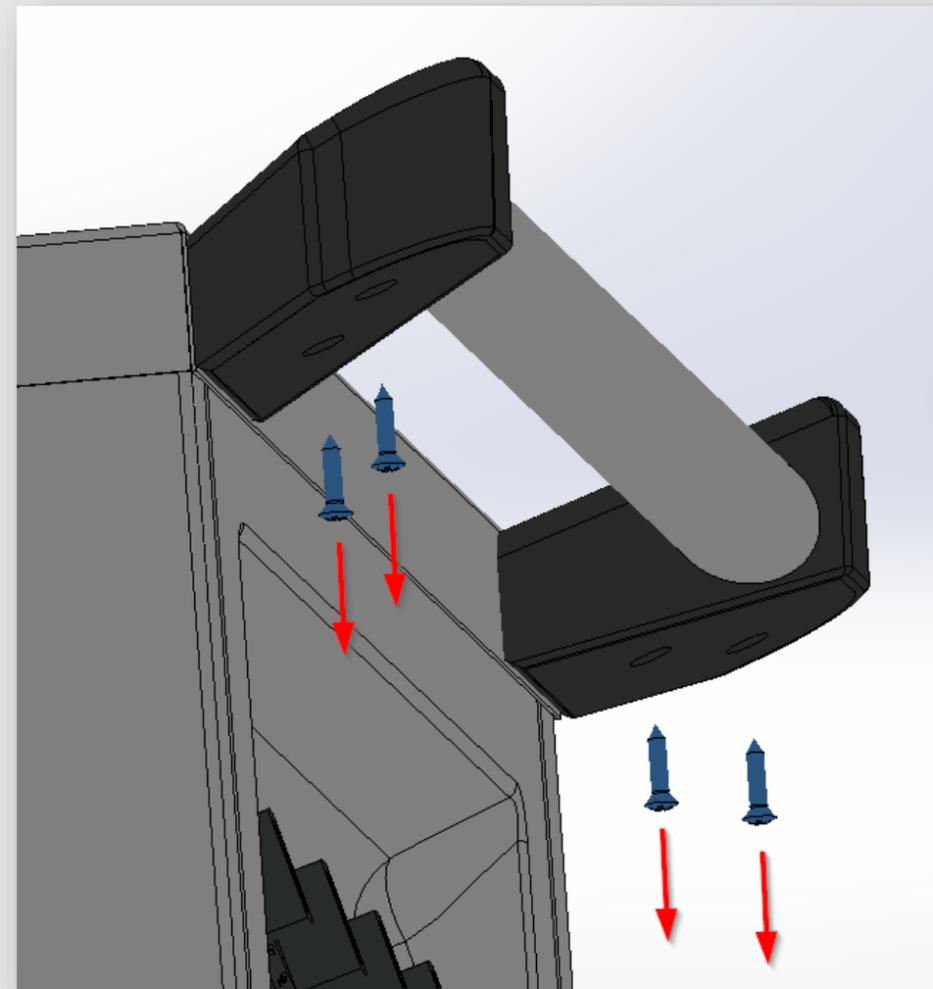


Sneeze guard - installation instructions

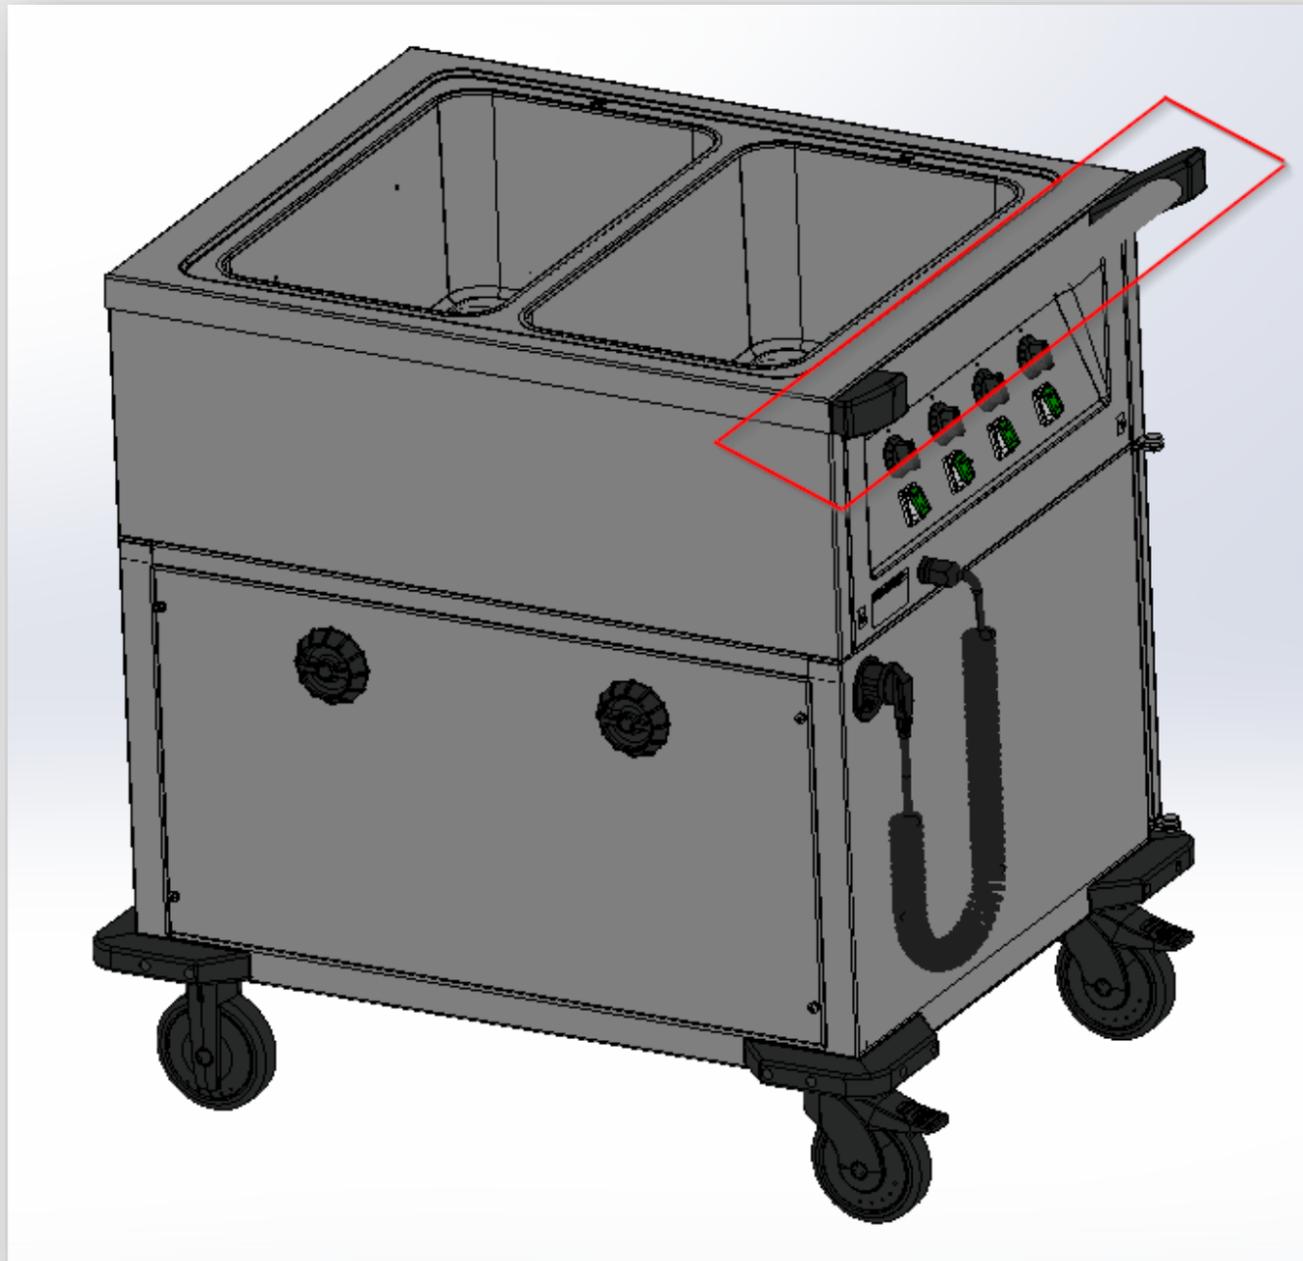


2. Remove handle covers.

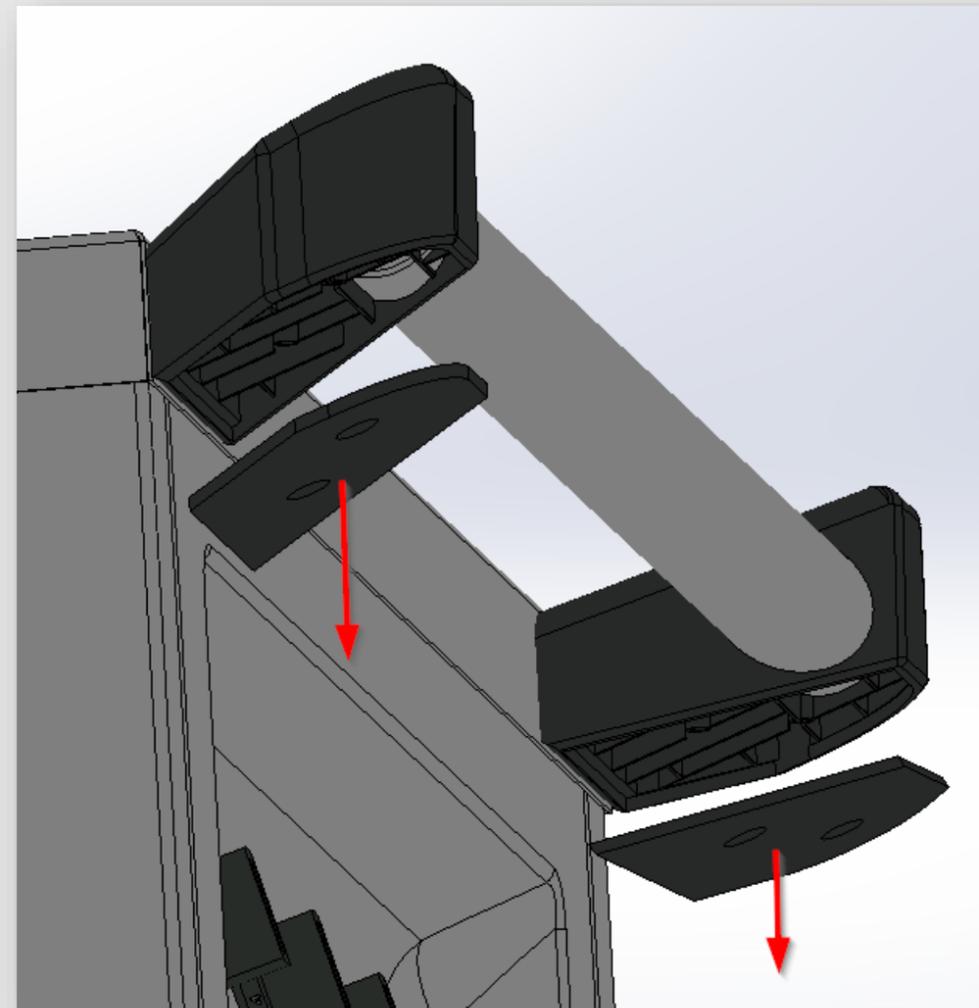


Sneeze guard - installation instructions

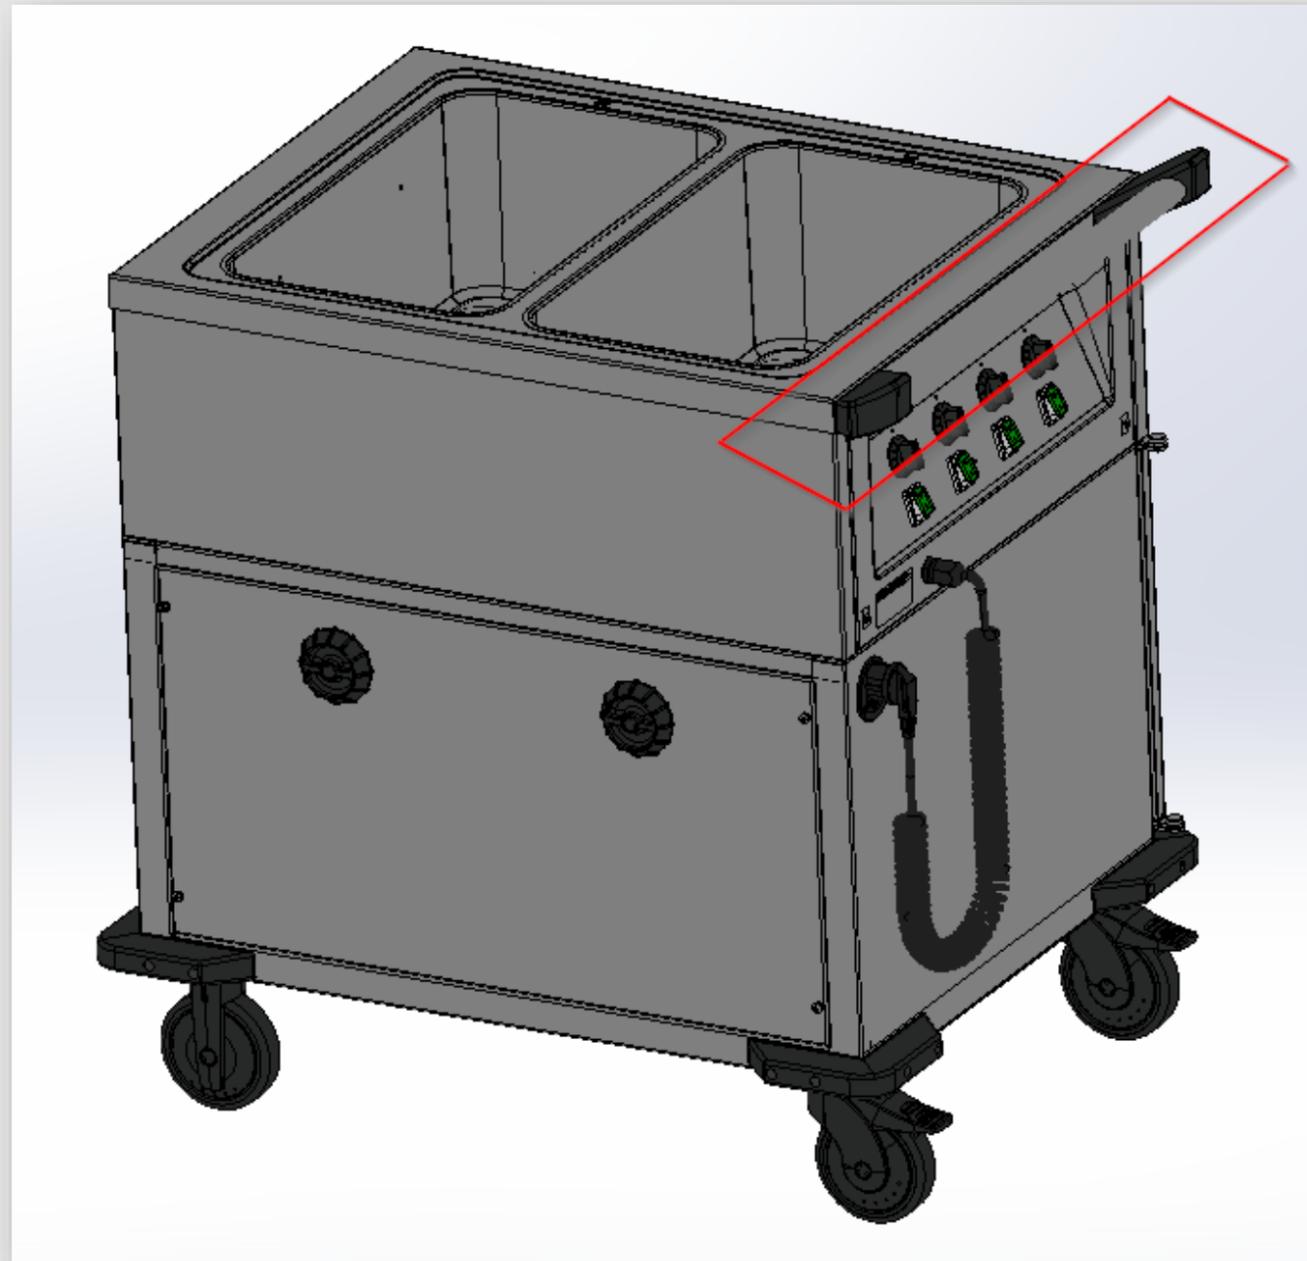


3. Unscrew bolts of the handle and removed handle of the corpus.

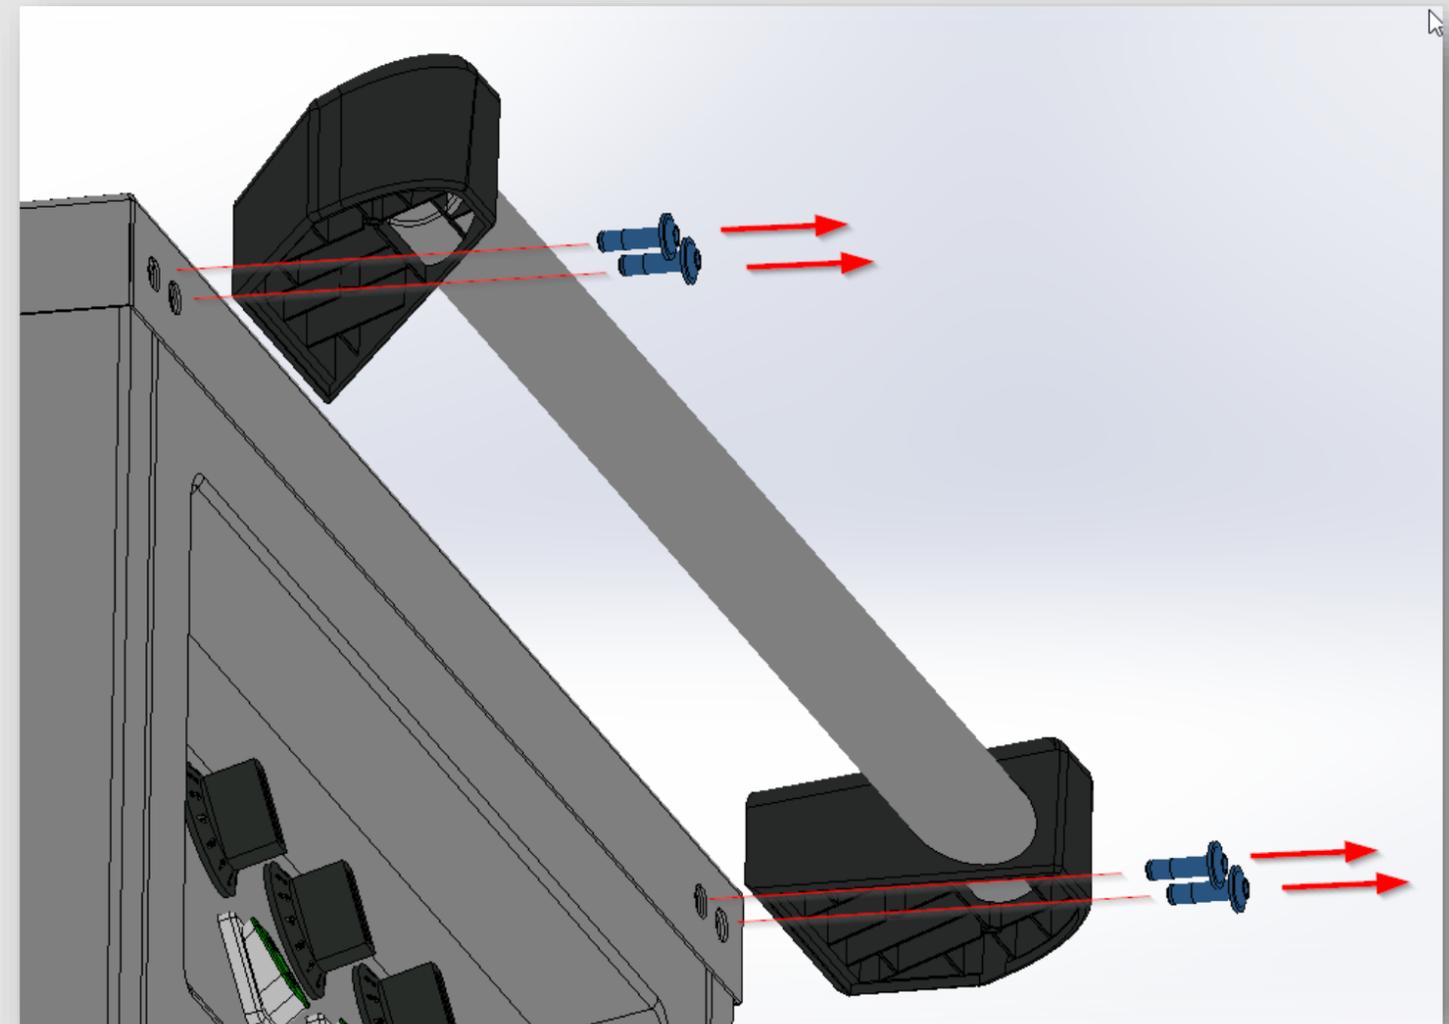


Sneeze guard - installation instructions

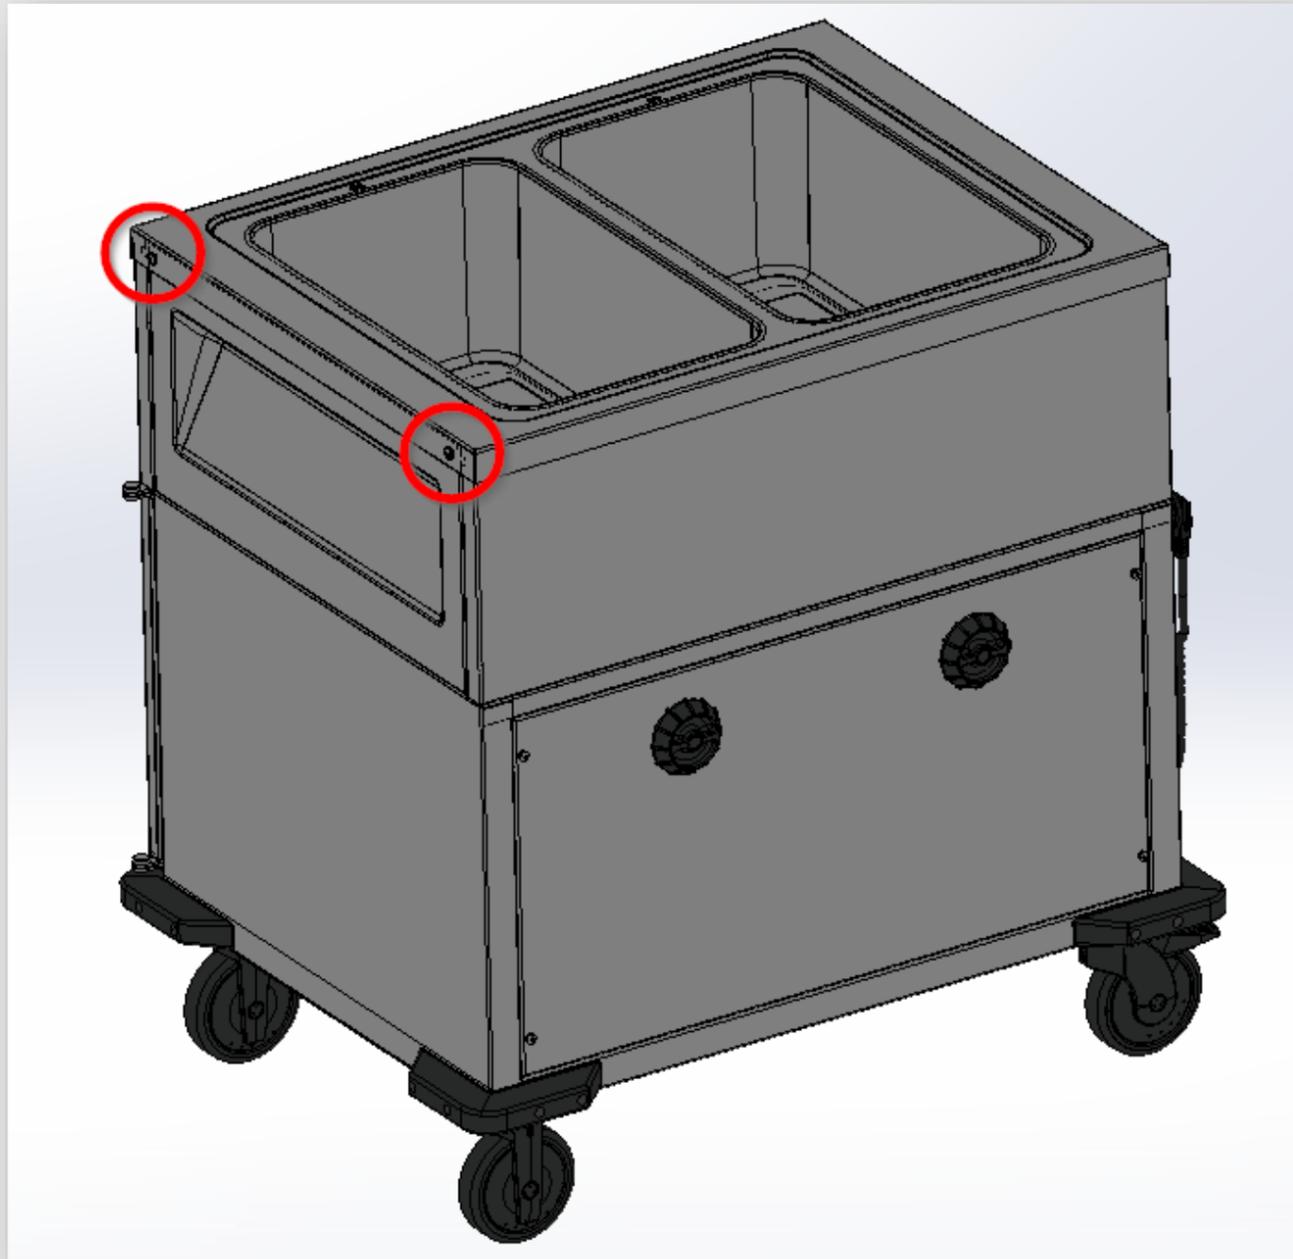



4. Unscrew bolts of the cover.

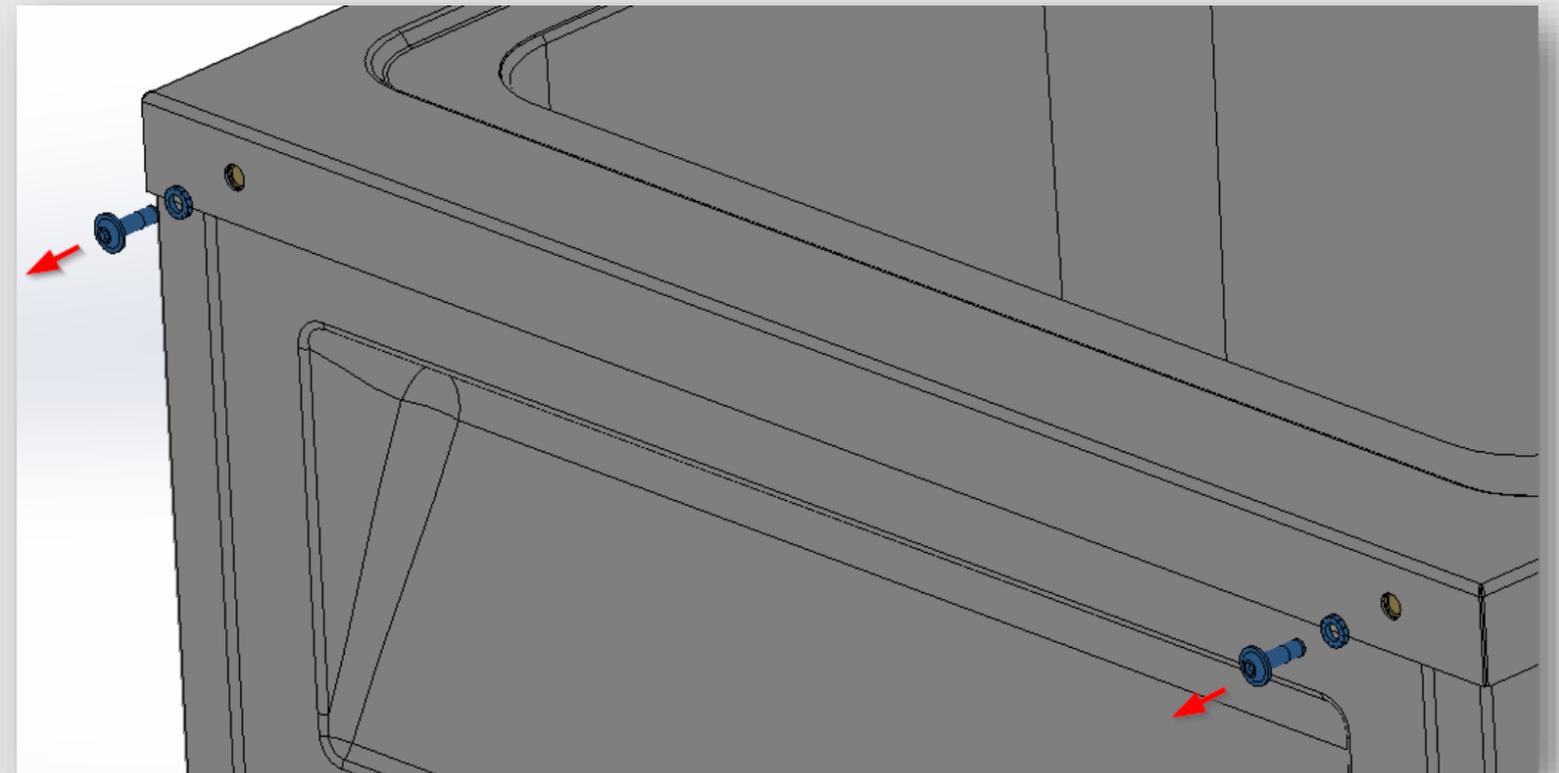


Sneeze guard - installation instructions

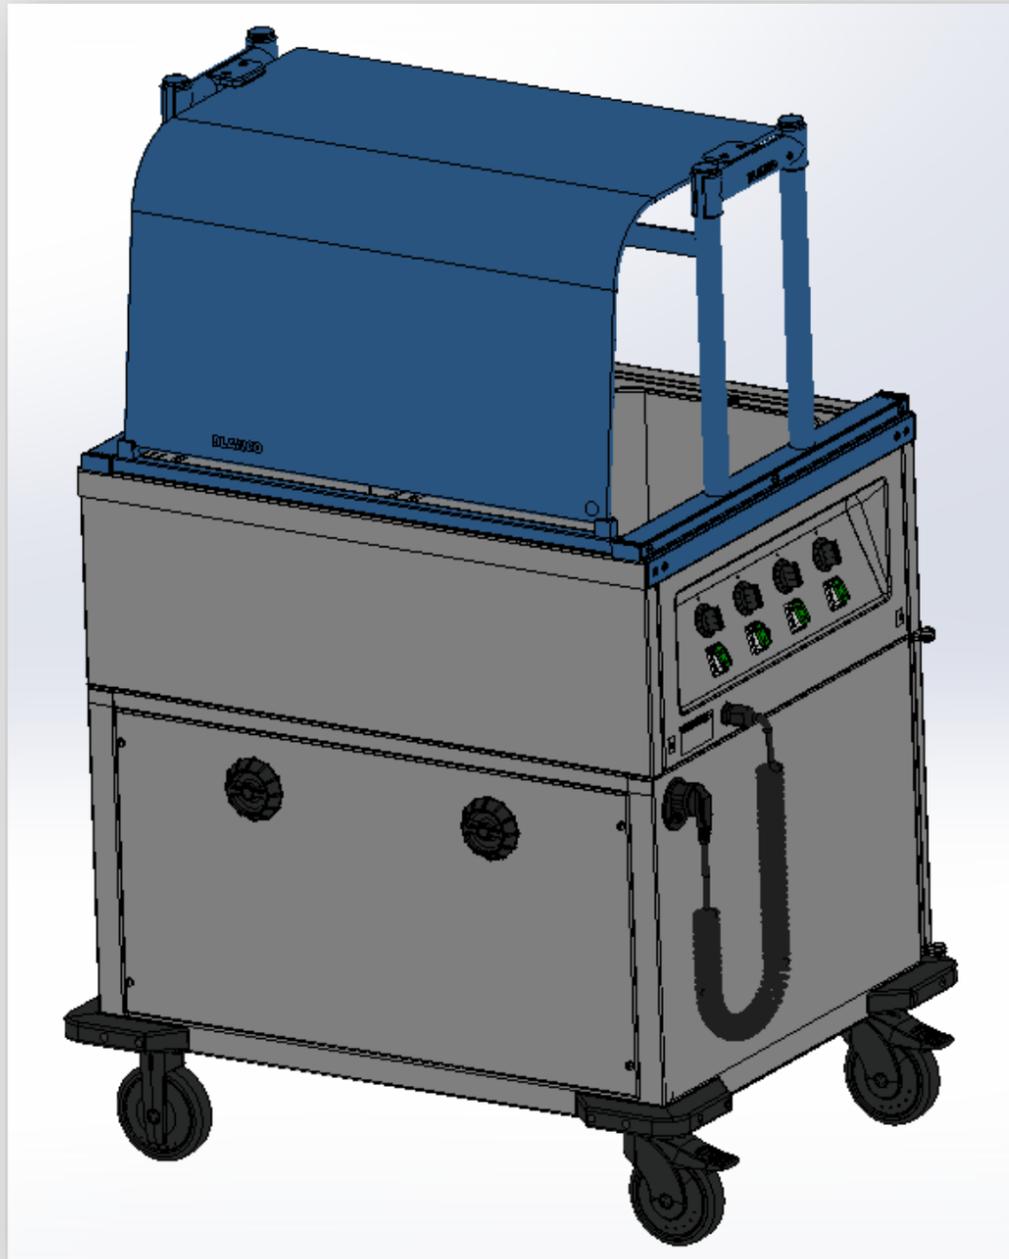


5. Put on sneeze guard on the product.

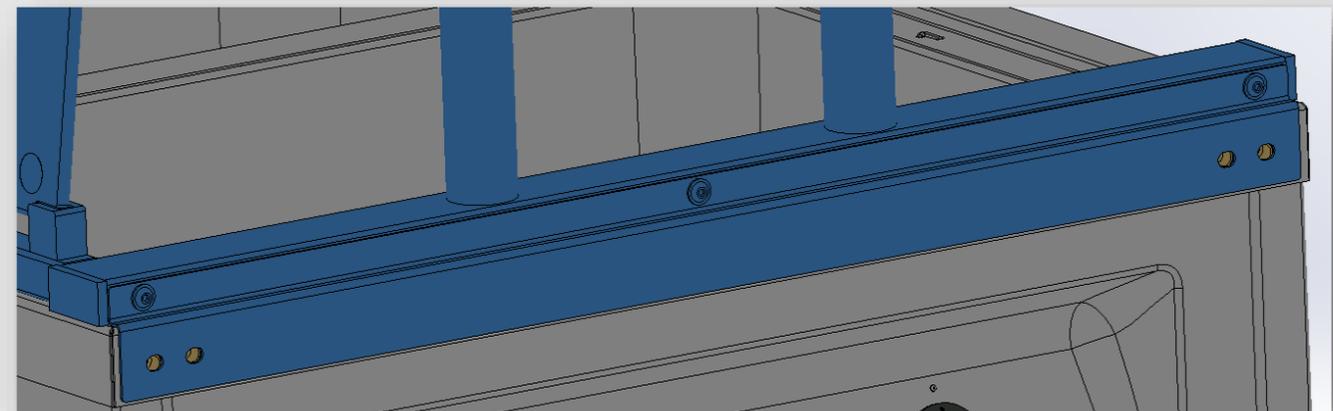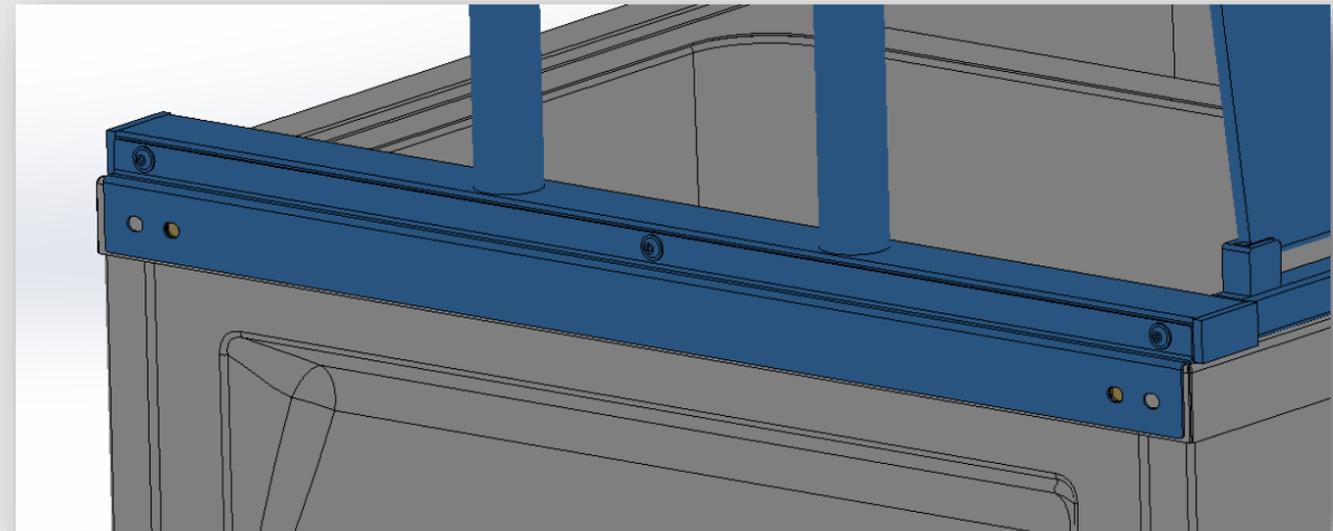


Sneeze guard - installation instructions

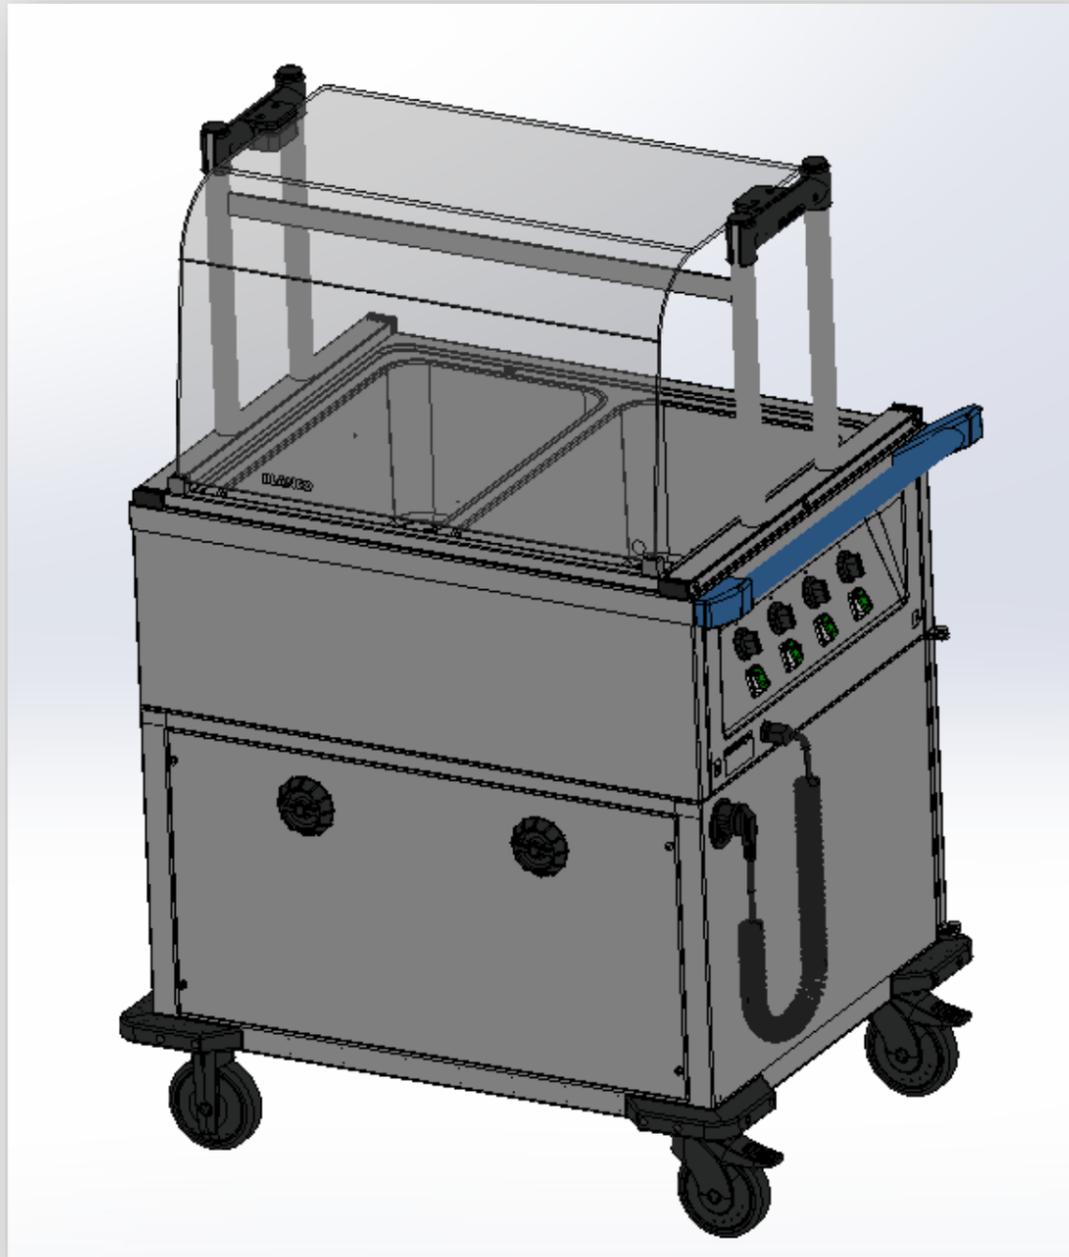


6. Screw on bolts through handle.

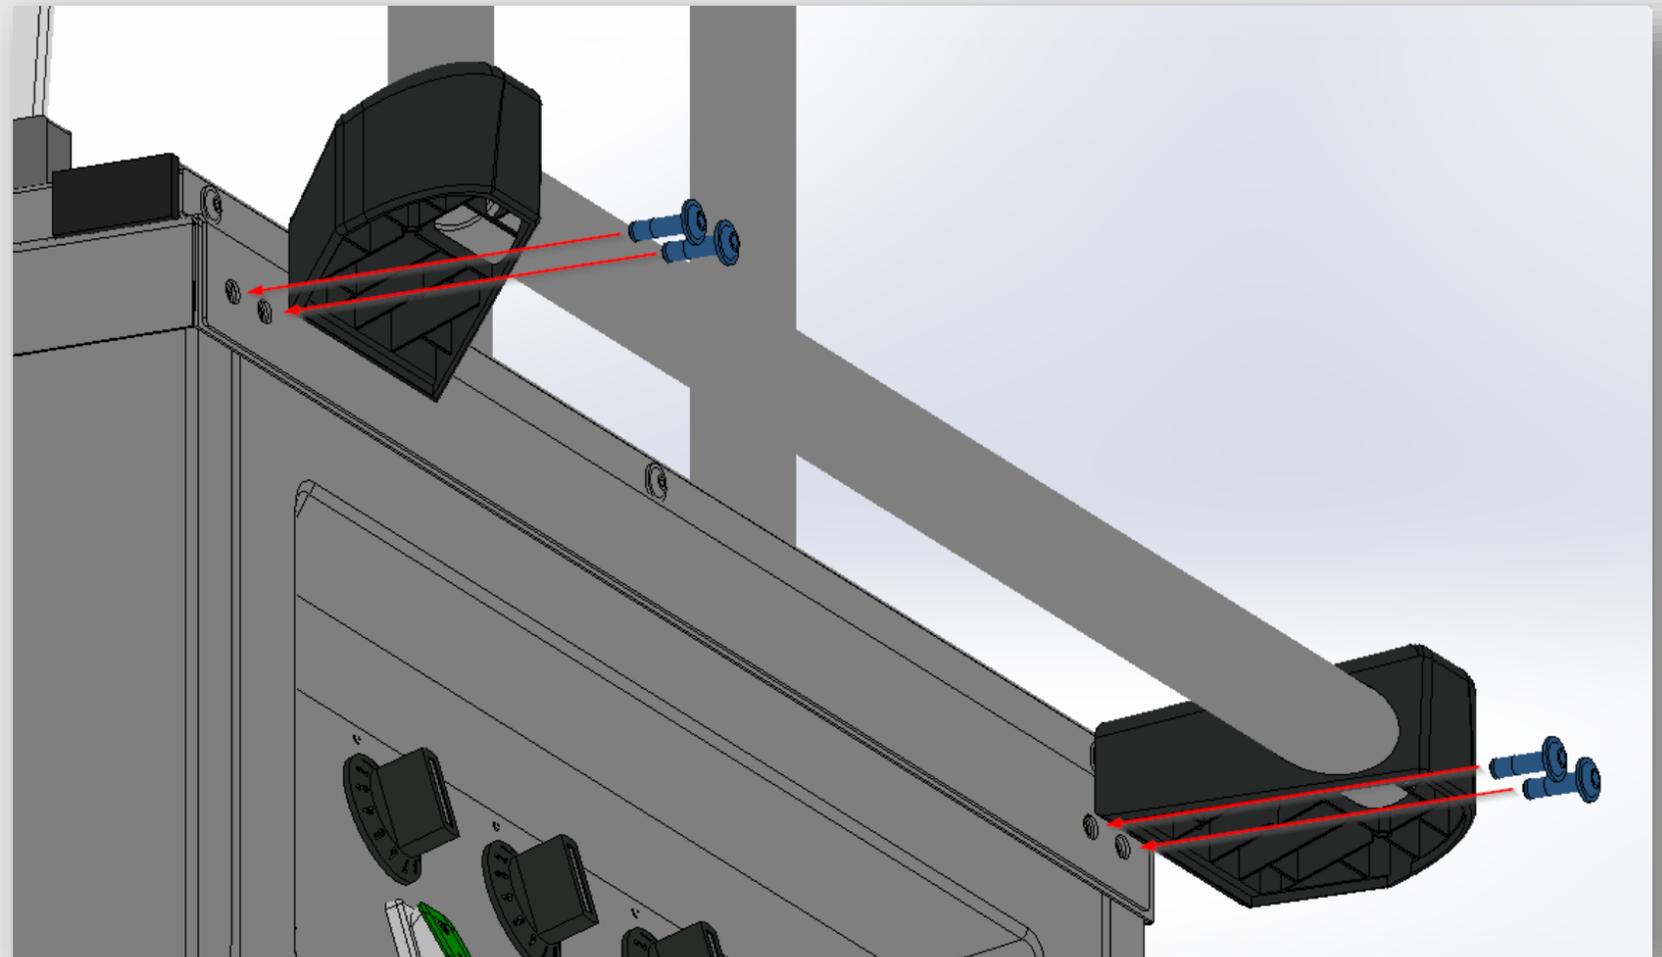

Sneeze guard - installation instructions

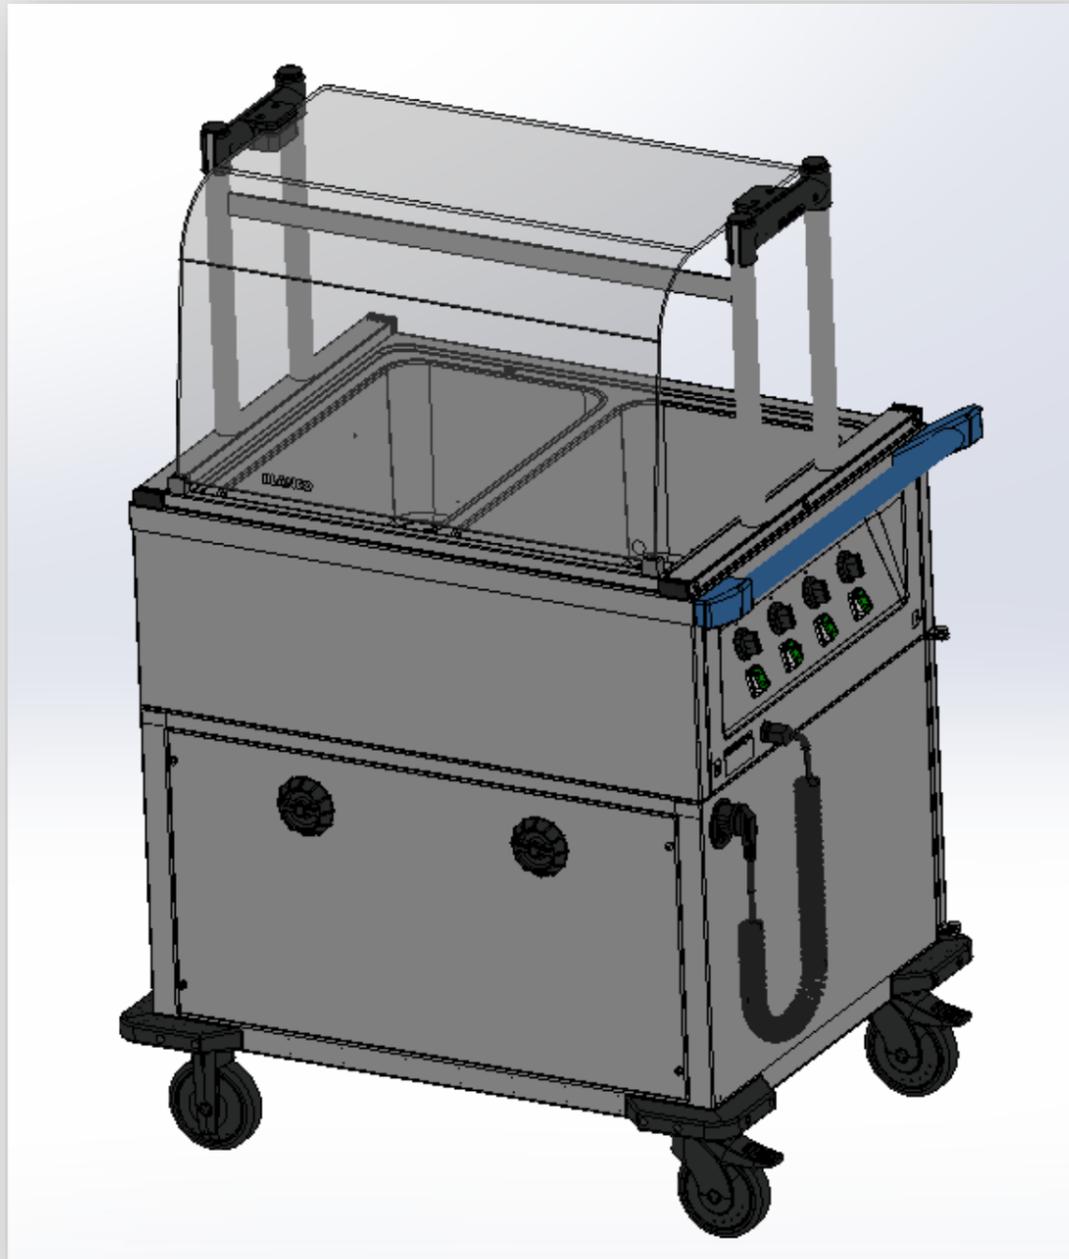

7. Screw on bolts and handle covers to the handle.

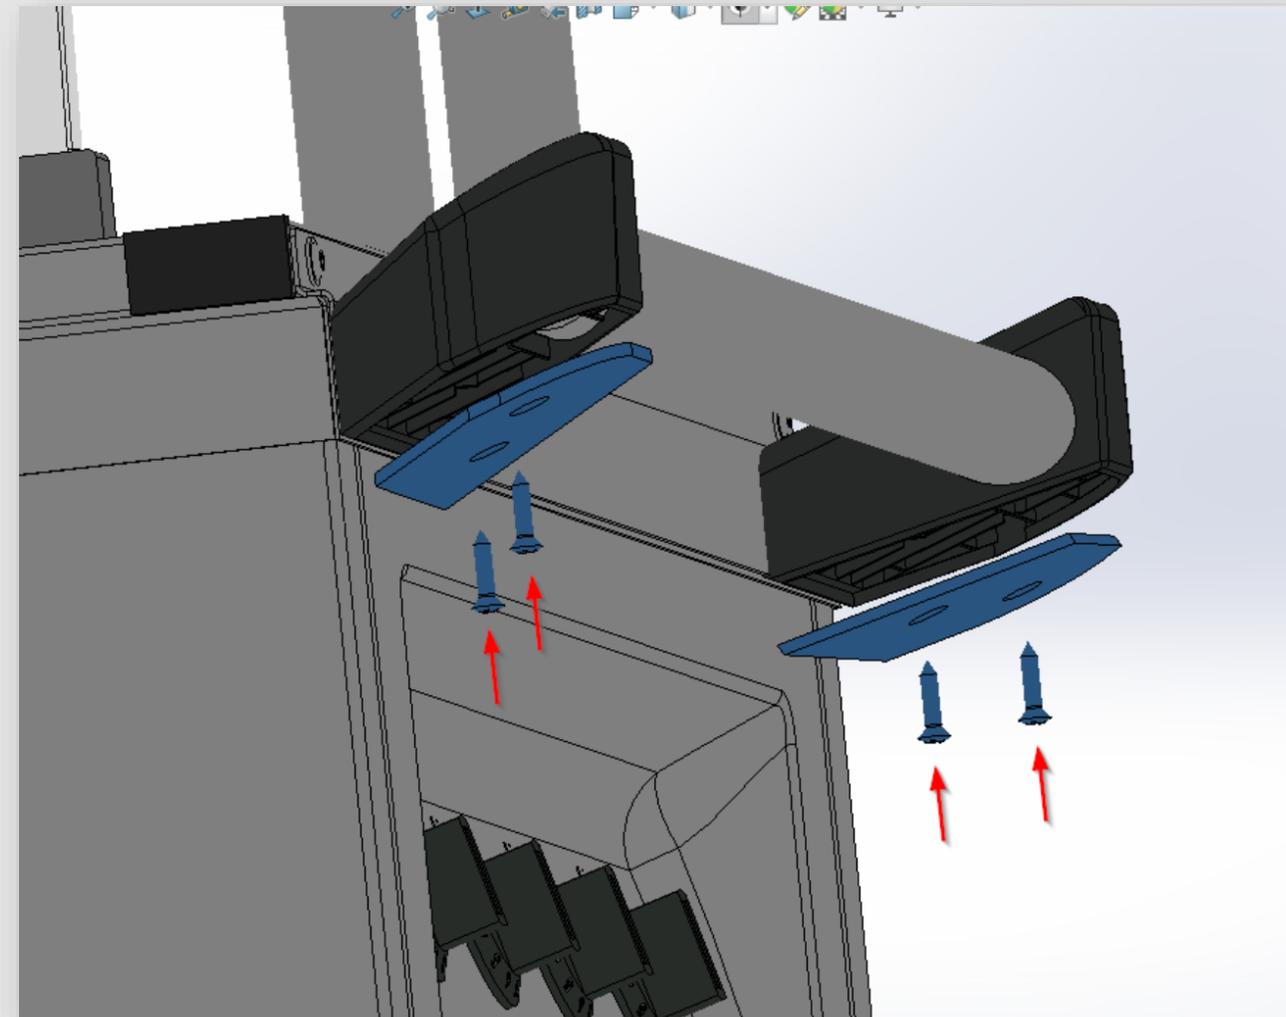

Sneeze guard - installation instructions



8. Screw on bolts + washers to the sneeze guard.

